













When all your settings are entered you can start the slide show by going to this section. Simply highlight Start and press the Menu (enter) button.



Finally the Format section is simply that. If you have to format an SD card this is where you go. You will lose all images on the SD card if you format it.